

1. Machine configuration and overall dimensions

Select your colour:	Select your region:	
Earth	Asia	Oceania
Tempest	Central - South America	North America
	Europe	Middle East

E'2c/Classic

Technical data			
Brew chamber	1 x 24 g		
Grinder	2 x Ceramic burrs - 64 mm		
User Interface	1 x Touch screen 256 mm (10.1'')		
Bean hopper	2 x 1.5 kg		
Coffee outlet height*	190 mm max.		
Hot water outlet height*	160 mm max. or 215 mm max. (option)		
Interface	2 x USB, 1 x Ethernet, 1 x CCI/CSI		
Cup heater surface	-		
Coffee boiler size	1 x 1.5 L		
Steam boiler size	-		
Grounds drawer	1 x 700 g		
Drip tray	Standard		
Water Connection			
Water hose	Inox braided pipe G3/8" female x 2 m		
Drain hose	Ø 22 mm x Ø 16 mm x 2 m		


Classic	E'2c	
Weight	52 kg	
Performance (up to)		
Espresso/h (23 s)	175	
Hot water/h (200 ml)	170	
Cappuccino/h (23 s)	-	
Adjustable hot water temperature (Manual)	-	
Adjustable hot water temperature (Automatic)		
e'Foam Micro Air Dosing (MAD) system (controlled electronically)	-	
Milk system with EMT (Electronic Milk Texturing)	-	
Voltage/Power		
Power consumption (standby mode)	Less than 2 W	

Water pressure and flow

2.5 - 4 bars (36.3 - 58 psi) If the pressure exceeds 4 bars (58 psi), it is necessary to install a pressure valve reducer.

To avoid damage to the water pump, a water flow rate of at least 150 l/h (2.5 l/min) must be ensured at the water inlet of the machine.

*measured from the drip tray

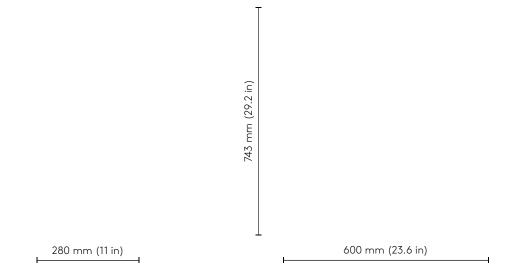

Ecoparc de Daval A2 • 3960 Sierre • Switzerland • +41 27 588 00 17 • techsupport@eversys.com • www.eversys.com



Enizma Installation sheet

2. Prior to the installation READ SAFETY INSTRUCTIONS

- Check water quality and pressure
- Define filter type and size and check space inside counter
- If no descaling cartridge is used, install carbon filter as minimum
- Check that the machine is on flat and stable surface
- Check counter cut out
- Check water supply installation
- Check that power supply conforms to local standards


3. After installation

- Explain cleaning and instruct staff using Quick Reference Card (QRC). Download here: <u>https://bit.ly/2VYO08O</u>.
- Save the machine data to an USB stick and send it to <u>data-upload@eversys.com</u>. Refer to: <u>https://bit.ly/3yTzsWo</u>.

4. Desk preparation and countertop cut out dimensions


- Download the pre-commissioning requirements check list here: <u>https://bit.ly/3CQ4zop</u>.
- Download the 1:1 scale countertop cutout here: <u>https://bit.ly/3xT5TTM</u>.

Min. height required to refill/remove bean hopper

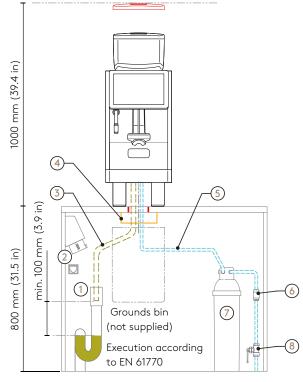

- 1. Drain with siphon, input min. Ø 56 mm.
- Electrical socket according to local regulation and RJ-45 connection (e'Connect).
- 3. Drain hose Make sure that there is no dip or any back pressure in the hose. The hose must always flow downwards.
- Undercounter ground coffee disposal (option).
 Main water braided pipe.
- Check valve according to local regulation.
- Descaling cartridge or carbon filter as minimum.
- Bescaling calculage of calcon inter as minimum.
 Pressure reducer output Only if water pressure exceeds 4 bars (58 psi).
- 9. Water inlet 3/8".

Refer to the commissioning manual (<u>https://bit.ly/3D4FuGm</u>) for more information.

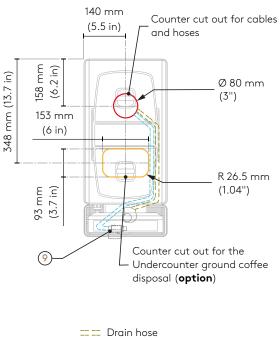

Water pipe

Water quality recommendation

Total hardness: 5 - 8° dGH (89-142 ppm) Carbonate hardness: Max. 6° dKH (107 ppm) pH value: ideal 7.0 - 7.2

Your local o	distributor:		

Ecoparc de Daval A2 • 3960 Sierre • Switzerland • +41 27 588 00 17 • techsupport@eversys.com • www.eversys.com

- Check that power supply conforms to the machine settings
- Check that the machine is the only device on this power line
 - Check all with customer on site
 - Make sure original coffee is available
 - Check drink recipes and cup sizes